 


**EPSON**  
EXCEED YOUR VISION

Home Cinema  
**EH-TW6000W**  
**EH-TW6000**  
**EH-TW5900**

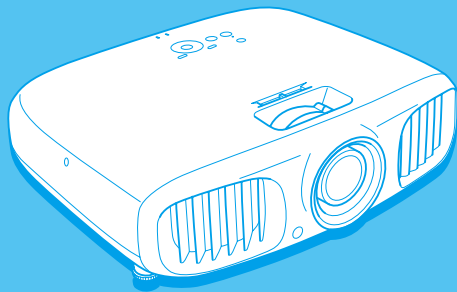







**HDMI™**  
HIGH DEFINITION MULTIMEDIA INTERFACE

Wi-Fi™


**3D**

      EN	Quick Start Guide	SV	Snabbstartsguide
DE	Kurzanleitung	CS	Úvodní příručka
FR	Guide de démarrage rapide	HU	Bevezetés
IT	Guida di avvio rapido	PL	Przewodnik szybkiego startu
ES	Guía de inicio rápido	EL	Οδηγός γρήγορης εκκίνησης
PT	Guia de Referência Rápida	TR	Hızlı Başlangıç Kılavuzu
NL	Introductiehandleiding	RU	Руководство по быстрой установке
DA	Introduktion	AR	دليل البداية السريعة
FI	Pika-aloitusopas	ZHS	设定手册
NO	Hurtigveiledning		

# 1


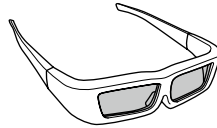
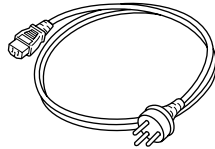
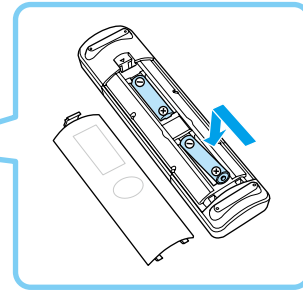
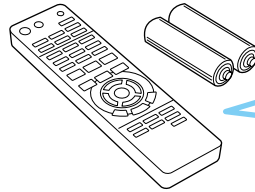
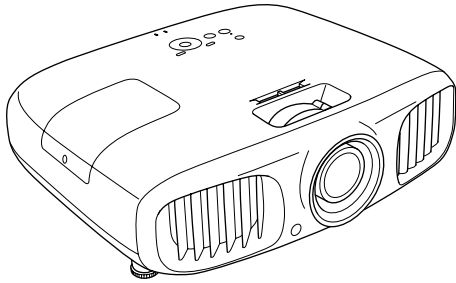


**EH-TW6000W/EH-TW6000 only**

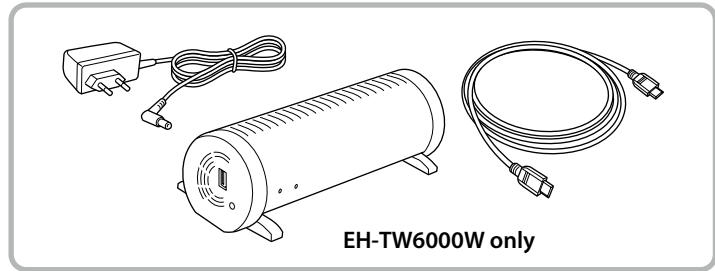 

**EH-TW6000W only**

      
# 2

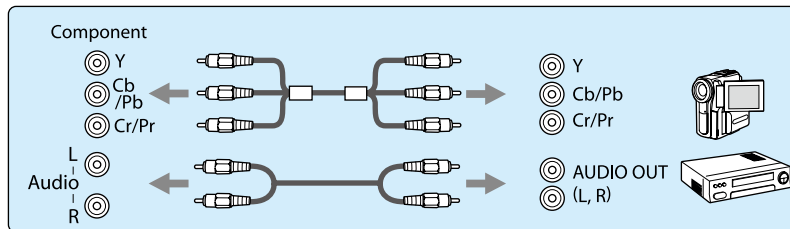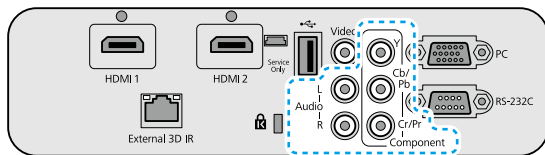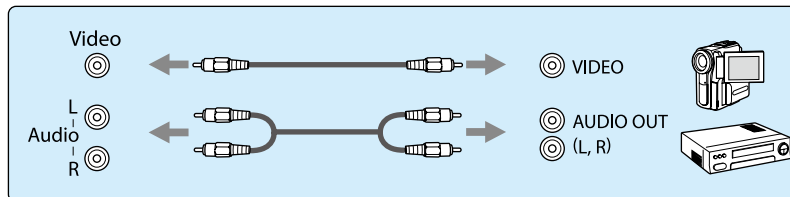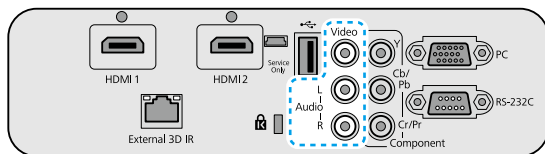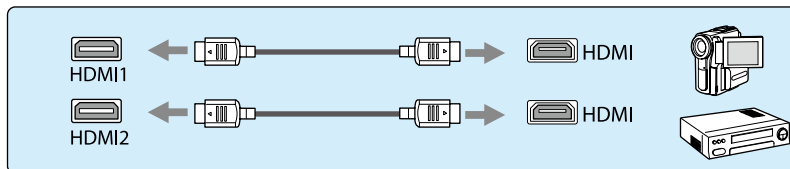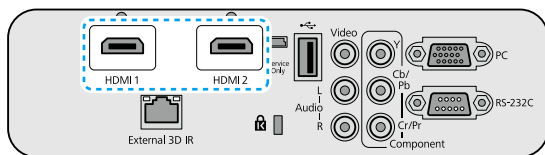

16:9


50"

 1.5m

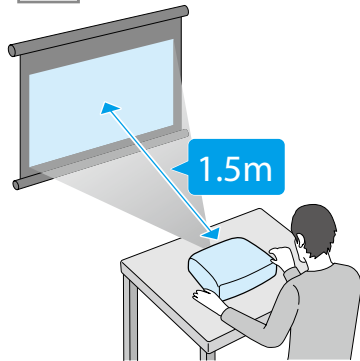


100"

 2.9m

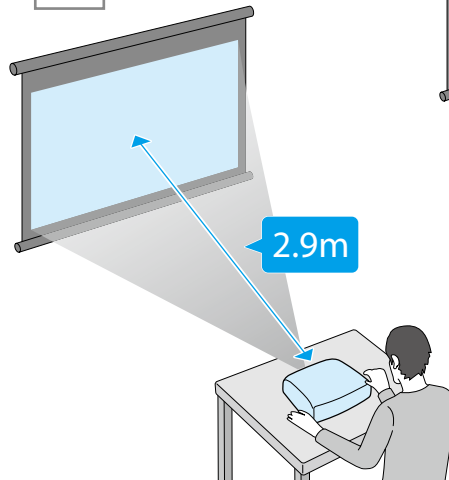





120"

 3.5m


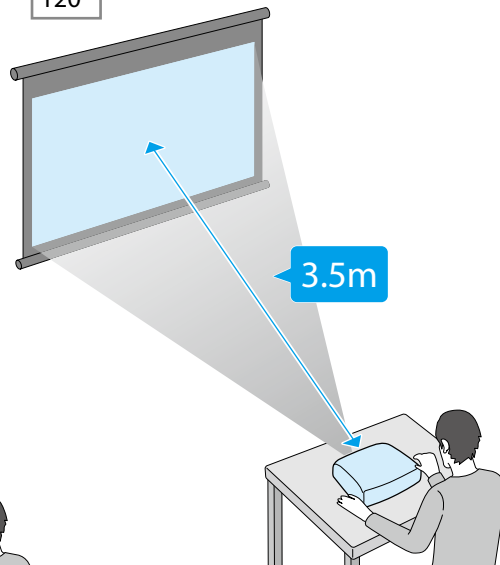




# 4

    **ON**

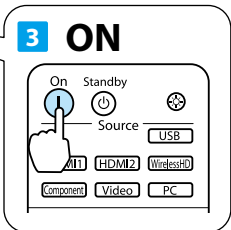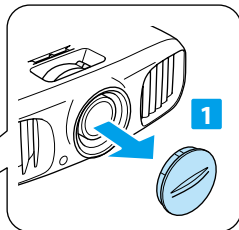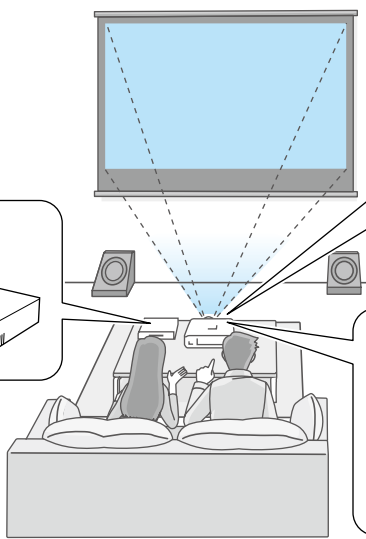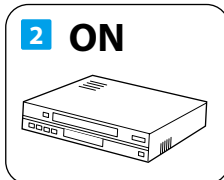




**OFF**

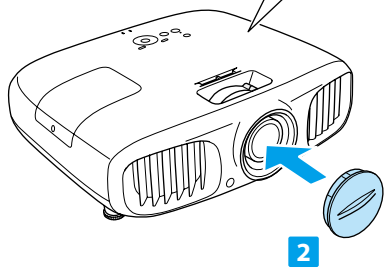 
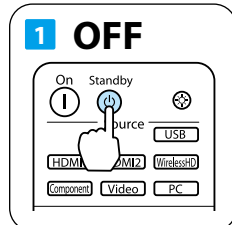 


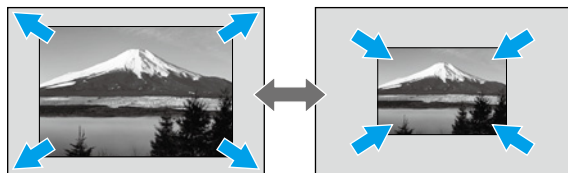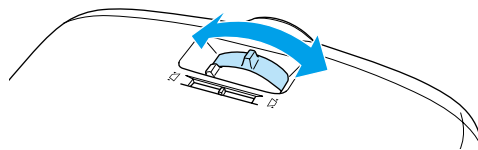  

◀ W T ▶

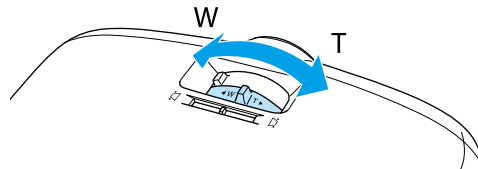 

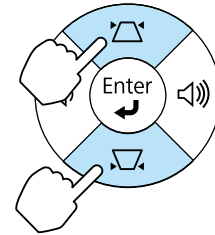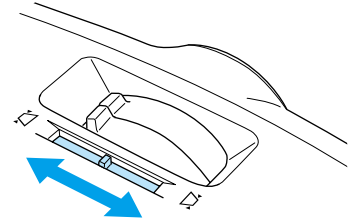  

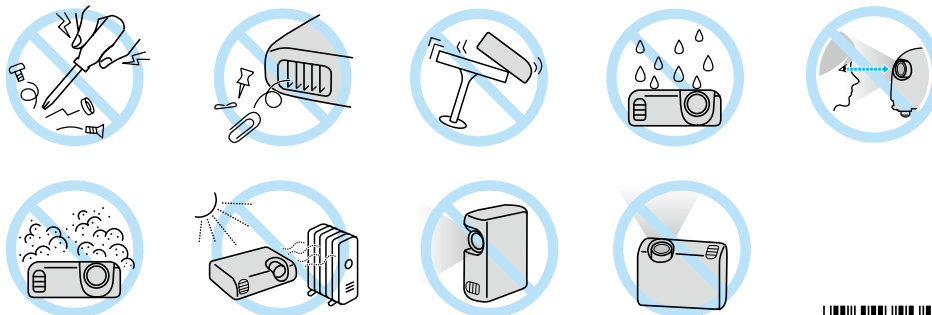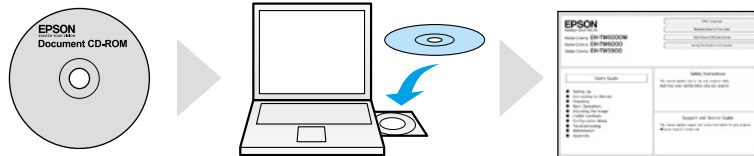  

Printed in China



\*412152300\*